



Opening a Transpec Hatch



1. Rotate the red knob 90 degrees in either direction.



2. Push the red knob into the lid.



3. Continue to push the lid to the fully open position (as shown).



Closing a Transpec Hatch

Release Hinge



1. If the hatch was opened with the lid in the fully closed position, the release hinge will still be in the down position.



2. Push the release hinge upward to the position shown.



3. Lower the lid into position.




Closing a Transpec Hatch



4. Guide the release hinge into the handle base on the lid as shown.



5. Pull down on the top of the lid to force the release hinge and the lid together until you hear "clicks". This will be the spring loaded handle setting in place.

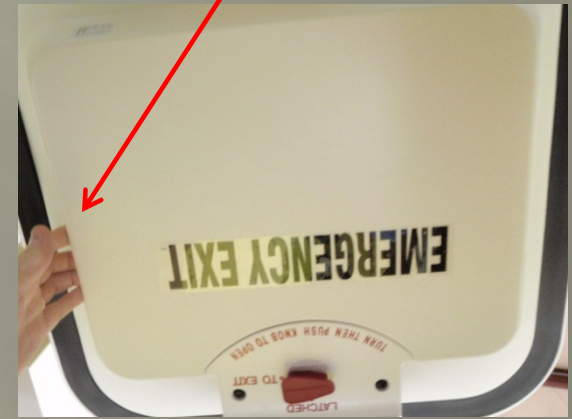

6. Grasp both sides of the lid and pull down to fully close the hatch.



Closing a Transpec Hatch



7. Rotate the red knob back into the position.



8. The red knob should be in this position during normal operation of the vehicle.